

How to Use

1. Turn the Funnel Handle to position the Pedal to block the cereal to fall down. Put a bowl under the Funnel. Uncover the PC Container and fill it with cereal. If necessary, adjust the Pedal to make sure the cereal completely blocked and then remove the bowl - the Dispenser is ready for serving.
2. For serving, put a bowl under the Funnel and turn the Handle to 60 degree (1 division of the pedals) or to 120 degree (2 divisions of the pedals). Make sure the cereal is



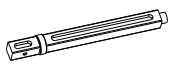



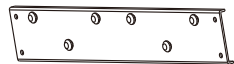



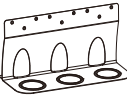
How to Clean / Maintenance

1. Cover / PC Container: Wash the Cover and PC Container with warm water and mild detergent. Rinse them with clean water and dry with soft cloth. (Remark: if the PC Container needs to be taken out for cleaning after use, hold the bottom of the Funnel with one hand and pull up the PC Container with another)
2. Funnel / Pedal: With clean and damp cloth, wipe the Funnel. Turn the Handle and clean the divisions of the Pedal one by one. Dry them with soft cloth. If the cereal leftovers stick to the Pedal and are not easily cleaned, disassemble the Funnel and Pedal and wash them individually as below (For washing method, please see 1. as above).
Unscrew the Handle ➡ Pull out the Shaft ➡ Take out the Funnel and Pedal
3. For stubborn stains stuck to the stainless steel or light discoloration, use non-abrasive cream cleaners with soft calcium carbonate additions or light ethyl alcohol.

Trouble Shooting

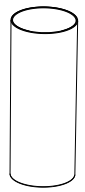1. Problem: The Pedal is slanting and can't block the cereal.
Solution: Check if the shaft slips. Fix it if so.
2. Problem: The parts are broken or damaged by accident.
Solution: Contact your local distributor.

Optional Parts

Picture	Description	Part No.
	PC Container	BP2271
	Funnel Handle	BP2278CR
	Pedal Shaft	BP2279
	Cover	23577L
	Screw Combination for U08 series	P2487
	Stainless Steel Bar for U08-0430	B2559M
	Stainless Steel Bar for U08-0420	B2560M
	Stainless Steel Bar for U08-0410	B2561M
	Base for U13-1100	B2671M
	Base for U13-1200	B2673M
	Base for U13-1300	B2675M

Contact Information

If you have any question, please feel free to approach our distributor in your local market or you can directly contact our customer service personnel as below.

Export Department (for all overseas markets except China) :

E-mail: sales@sunnexproducts.com or sales@sunnex1929.com

Tel: +852-2775-0204 or +86-2555-4136

Website: www.sunnexproducts.com or www.sunnex1929.com

Hong Kong Office:

20/F., Sunbeam Plaza, 1155 Canton Road, Kowloon, Hong Kong.

China (Sha Tou Jiao) Office:

2/F., Block A, Dong He Industrial Building, Yue He Street, Sha Shen Road, Sha Tou Jiao, Shen Zhen, China

China Sales Department:

E-mail: sales@sunnexchina.com

Tel: +86-755-2555-1571

Website: www.sunnexchina.com

China (Sha Tou Jiao) Office:

2/F., Block A, Dong He Industrial Building, Yue He Street, Sha Shen Road, Sha Tou Jiao, Shen Zhen, China



Instruction Manual – PDF



www.sunnexproducts.com



www.sunnex1929.com



SUNNEX®

 
Instruction Manual of Cereal Dispenser




Warning

- Don't place the unit in direct sun for a long time or expose it to high temperature environment.
- Don't scrub the unit with a rough cloth, don't scratch it with a sharp object, and don't bang it.
- Don't let the unit directly contact acid or alkaline corrosive chemicals. Don't clean the unit with Isoamyl Acetate (or with other thinner).

Product Specification

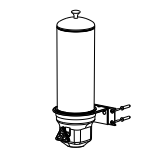

Item No.	U08-0410
Shape / Cap	4ltr
Size	20.0(L) x 17.5(W) x 47.5(H)cm

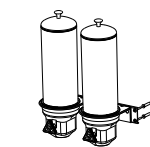 


Item No.	U08-0420
Shape / Cap	4ltr x 2
Size	38.0(L) x 17.5(W) x 47.5(H)cm




Item No.	U08-0430
Shape / Cap	4ltr x 3
Size	56.0(L) x 17.5(W) x 47.5(H)cm



Item No.	U13-1100
Shape / Cap	4ltr
Size	18.4(L) x 24.0(W) x 60.0(H)cm

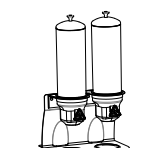 

Item No.	U13-1200
Shape / Cap	4ltr x 2
Size	36.2(L) x 24.0(W) x 60.0(H)cm

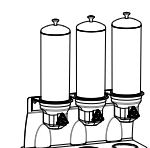 

Item No.	U13-1300
Shape / Cap	4ltr x 3
Size	54.0(L) x 24.0(W) x 60.0(H)cm

Product Drawing

Diagram 1 U08-0410 Part List

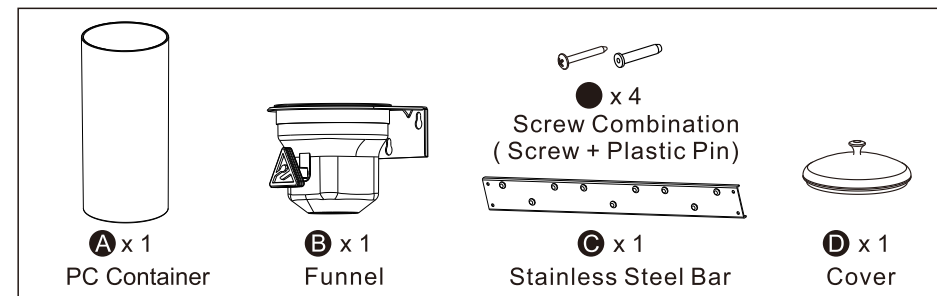 


Diagram 2 U08-0420 Part List

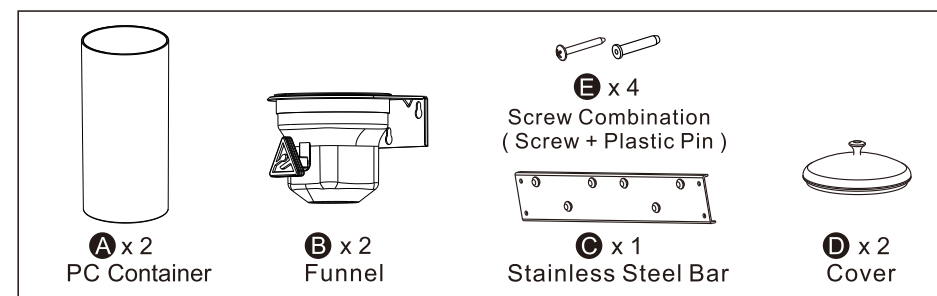 


Diagram 3 U08-0430 Part List

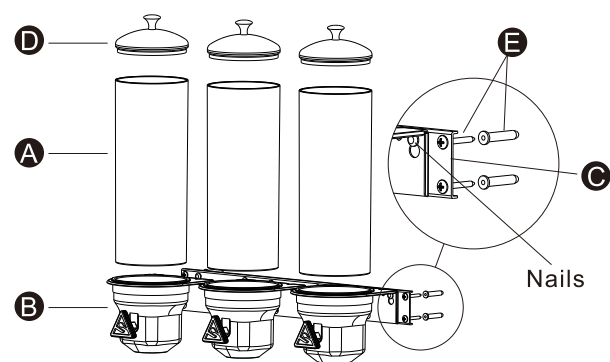 
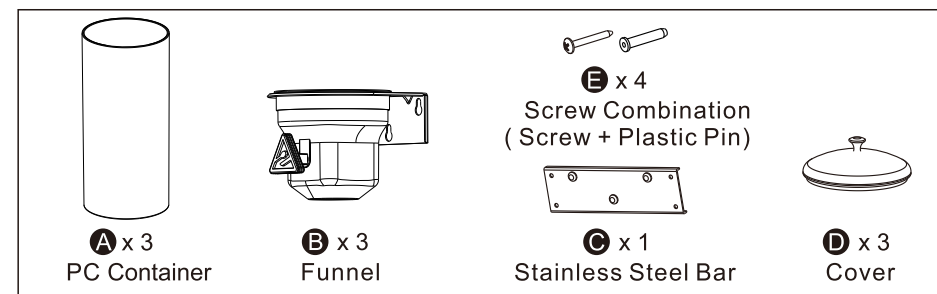 


Diagram 4 U13-1100 Part List

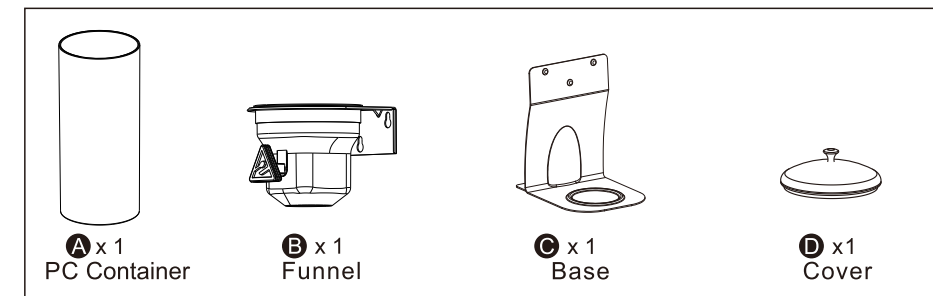 


Diagram 5 U13-1200 Part List


 
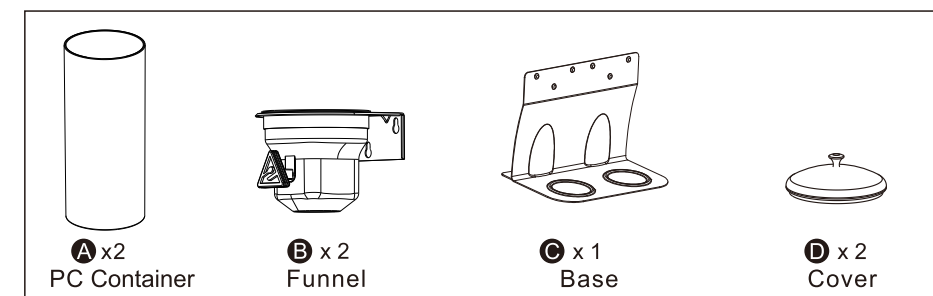 


Diagram 6 U13-1300 Part List

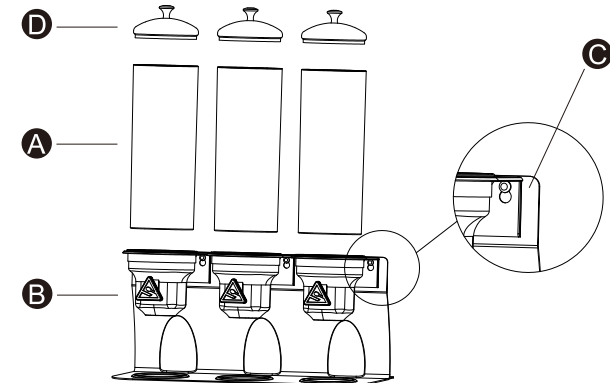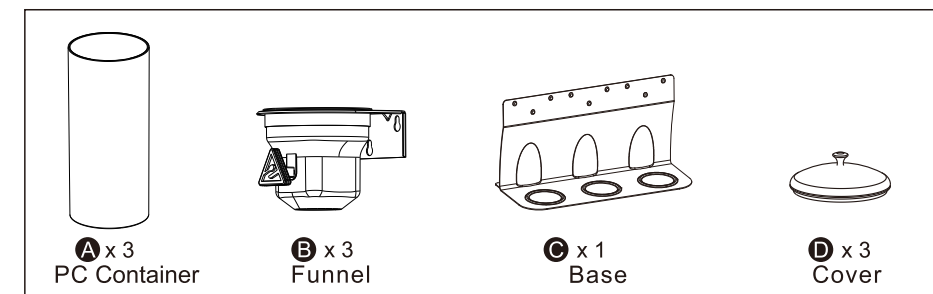 

How to Assemble

U08-0430, U08-0420, U08-0410

1. Drill 4 holes (Dia.6mm) on the wall aiming at the 4 holes of Stainless Steel Bar.
2. Insert the Plastic Pins to the 4 holes on the wall.
3. Using Screws to fix the Stainless Steel Bar to the wall.
4. Hang the Funnels at the Nails of the Stainless Steel Bar.
5. Place the PC Containers on the top of the Funnels and Covers on the top of the PC Containers.

U13-1100, U13-1200, U13-1300

1. Put Base on flat surface.
2. Hang the Funnels at the Nails of the Stainless Steel Bar.
3. Place the PC Containers on the top of the Funnels and Covers on the top of the PC Containers.